



INSTRUCTION MANUAL

Kadeka Signature

KS40TL

KS140TL

This manual contains i m p o r t a n t information including safety and installation instructions of the appliances. Please read it carefully before use and follow all safety information and instructions. It is r e c o m m e n d e d to keep this manual for easy reference so that you can be familiar with the operation of the appliance.

--CONTENTS--

IMPORTANT SAFETY INFORMATION	1
DESCRIPTION OF APPLIANCE AND INSTALLATION.....	3
KS40TL	3
KS40TL/KS140TL REVERSING THE DOOR OPENING	4
KS140TL.....	7
ACCESSORY INSTALLATION BEFORE OPERATING	8
UNPACKING AND CLEANING THE WINE CHILLER.....	8
LOCK & UNLOCK THE DOOR (FOR OPTION)	8
OPERATING THE WINE CHILLER	9
WORKING CLIMATE.....	9
WINE STORAGE.....	9
CONTROL PANEL	10
LOCK AND UNLOCK.....	11
TEMPERATURE SETTING	11
LAYOUT AND STORAGE	12
CARE AND MAINTENANCE.....	13
CLEANING THE WINE CHILLER.....	13
REMOVING THE SHELVES.....	13
POWER FAILURE.....	14
MOVING THE WINE CHILLER	14
ENERGY SAVING TIPS.....	14
TROUBLESHOOTING	15

Please remove all packaging, stickers and films from the products surface and clean the product's surfaces with a damp cloth and mild detergent before using for the first time.

Let the appliance stand upright for approximately **24 hours** before connecting it to the power source, which helps to reduce the possibility of a cooling-system malfunction from handling during transportation.

IMPORTANT SAFETY INFORMATION

Before using the appliance, please properly position and install it as described in this manual. To avoid the risk of fire, electrical shock, or injury when using the appliance, follow these basic precautions:

- This appliance is for domestic purposes only and is intended to be used exclusively for the storage of sealed bottled wines and beverages.
- The appliance must be positioned so that the plug is accessible.
- Make sure the voltage/current marked on the rating label corresponds with your supply voltage. Plug into a grounded 3-pin outlet, do not remove grounding pin, do not use an adapter, and do not use an extension cord.
- **Do not** connect or disconnect the electric plug with wet hands.
- To disconnect the appliance, grip the plug and pull it from the wall outlet. Never pull out by the cord.
- It is recommended that a separate circuit, serving only your appliance be provided.
- Unplug the appliance or disconnect power before cleaning, maintenance or servicing. Failure to do so can result in electrical shock or death.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- The fuse (or circuit breaker) size should be **10 Amps** or higher.
- Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- To ensure proper ventilation for the appliance, the front of the unit must be completely unobstructed. Locate the unit away from direct sunlight and sources of heat (stove, heater, radiator, etc.).
- Do not attempt to repair or replace any part of the appliance unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician.
- Ensure enough people to move and install the appliance to avoid any damage to the appliance or injury to the people.
- It is important for the appliance to be leveled in order to work properly. You may adjust the appliance's feet to level it.
- Never clean the appliance parts with flammable fluids which may create a fire hazard or explosion. And do not store or use gasoline or other flammable vapors and liquids in the vicinity of the appliance.
- **Do not** use solvent-based cleaning agents or abrasives on the interior. These cleaners may damage or discolor the interior.
- **Do not** use this appliance for other than its intended purpose.
- Please keep the products away from the fire or similar glowing substance before you dispose the appliance.
- When you dispose the appliance, take off the door and leave the shelves in place so that children may not easily climb inside. And make sure the coolant circuit, particularly the heat exchanger at the back/bottom of the unit is not be damaged.







The recycle symbol on the product or its packaging indicates that this product is not to be handled as normal household waste and it is to be taken to a recycling collection point for electrical and electronic goods.

DESCRIPTION OF APPLIANCE AND INSTALLATION

KS40TL (left door opening)

Single Zone: 40 Bottles

NO

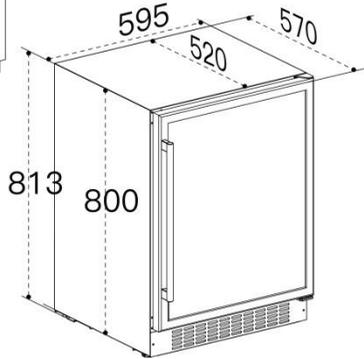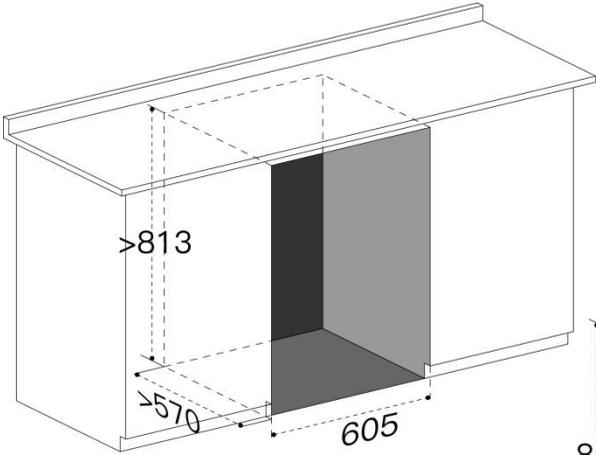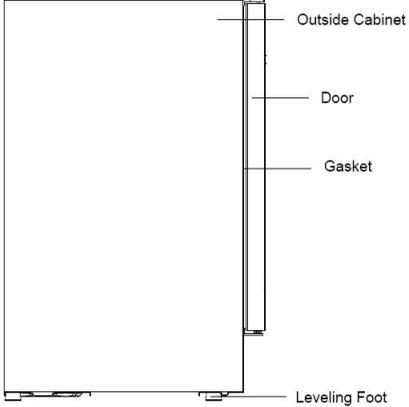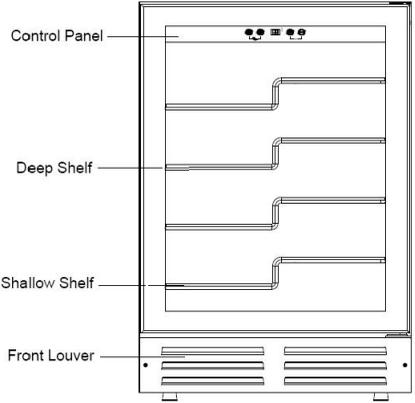


REVERSING THE DOOR


KS40TL/KS140TL (right door opening)

Before you begin: Tape down shelves to avoid movement during the process


- The unit may have been delivered to you with the door opening from the left side (hinges on the right).
- The door of this appliance can be hung to open on the left or right side. To reverse the door swing of your cellar and open from the opposite side, please follow the instructions and diagram below.
- 1. Open the door and loosen the screws from the support rod of the bottom hinge.

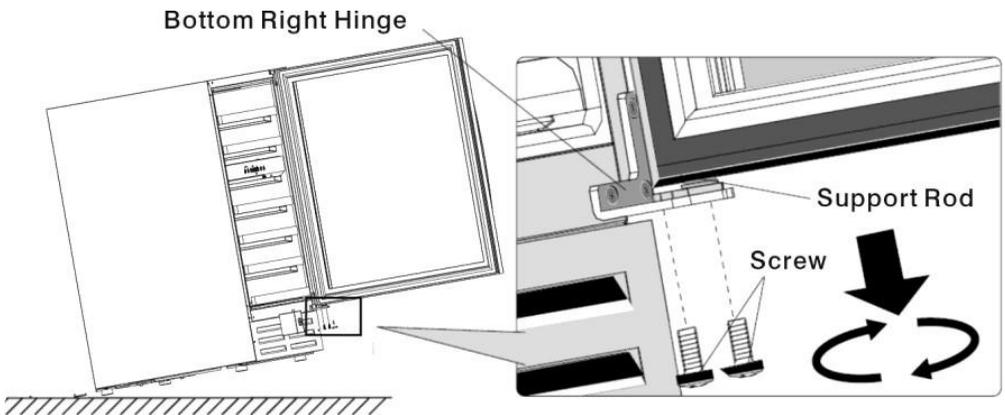


- 2. Remove the door off the upper hinge and take out the support rod.

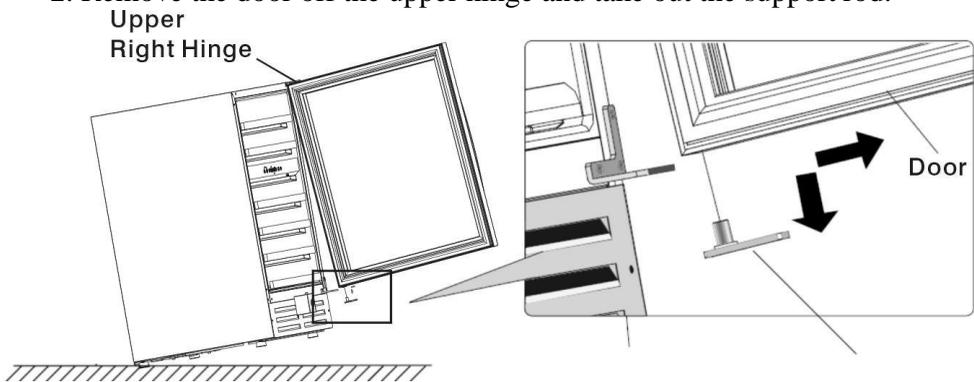


- 3. Use a small flat head screwdriver to pry up the lock hole cap on top of the door and remove to the bottom.
- 4. Unscrew the upper and bottom hinges.

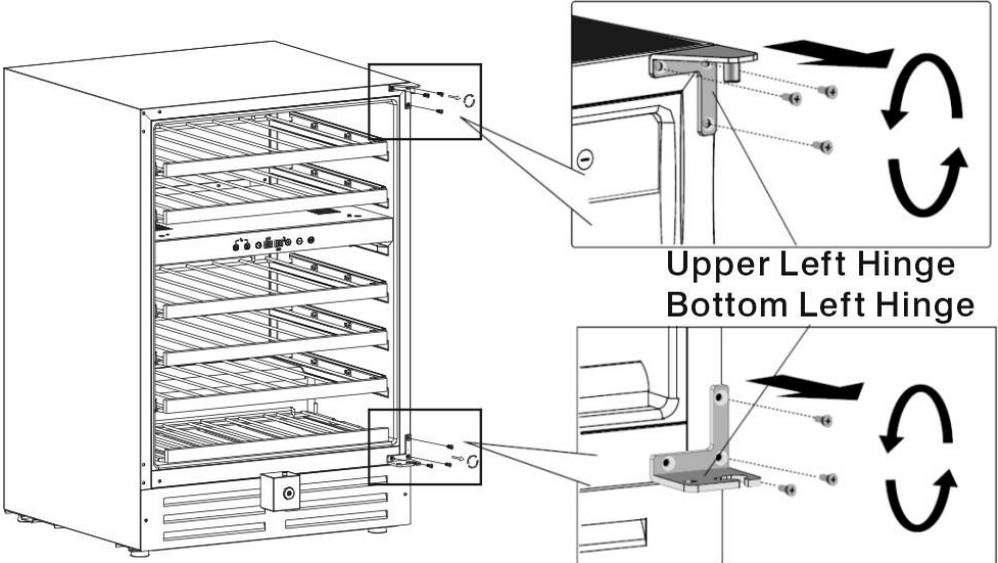

- 5. Pry out the plastic caps at the left side of the cabinet and remove them to the right side.
- 6. Install the hinge set which are packed as accessories with the instruction manual to the opposite side.

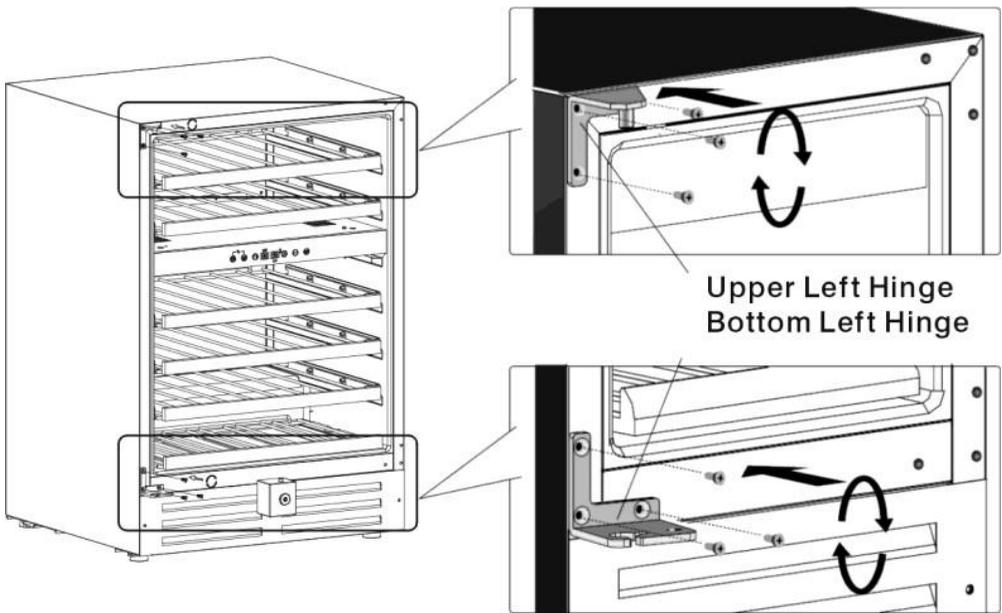





- 7. Rotate the door 180° so that the top is now the bottom and install it by attaching the support rod with screws.

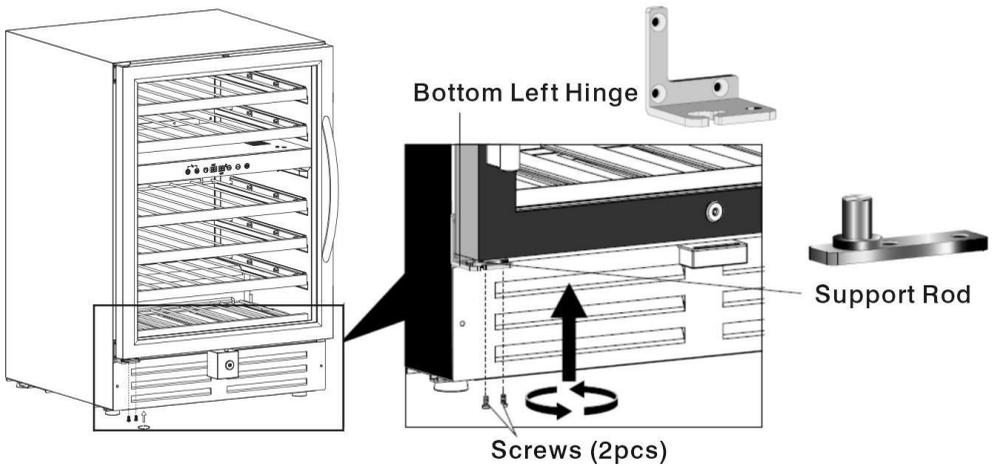

- Glass doors include integrated door pull handles. There is no need to alter the location of door pull handles.

KS140TL (left door opening)

Single Zone: 140 Bottles

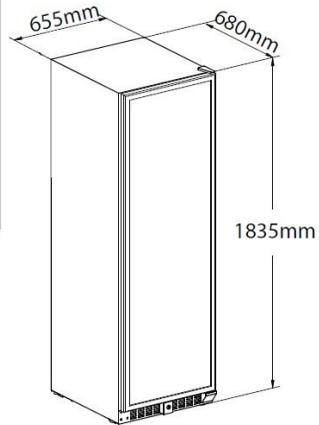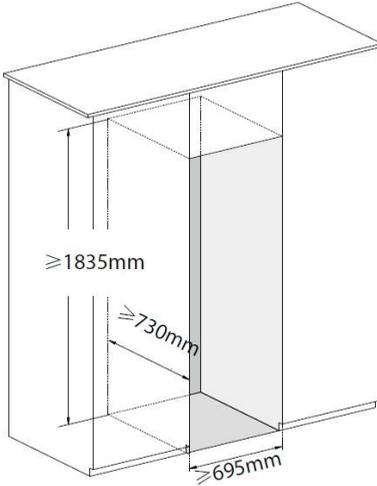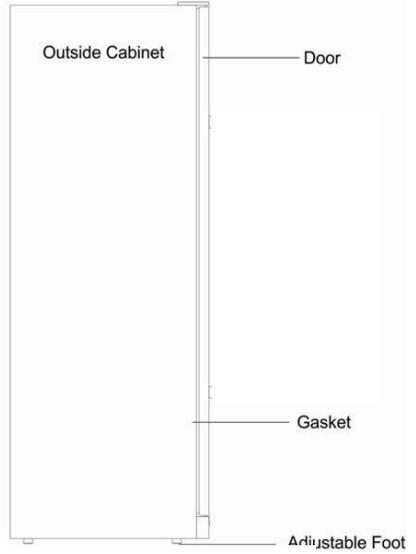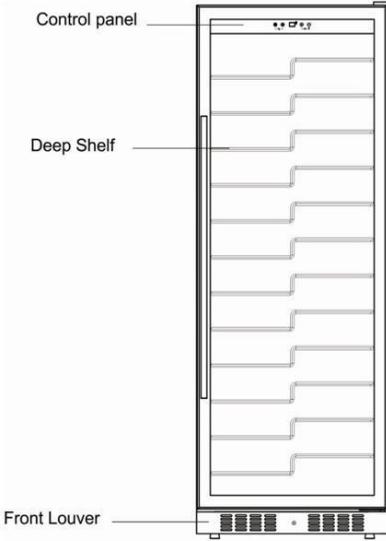

ACCESSORY INSTALLATION BEFORE OPERATING

UNPACKING AND CLEANING THE WINE CHILLER

- Remove the exterior and interior packing materials.
- Let the appliance stand upright for approximately 24 hours before connecting it to the power source, which helps to reduce the possibility of a cooling-system malfunction from handling during transportation.
- Use a soft cloth to clean the interior surface with lukewarm water.

LOCK & UNLOCK THE DOOR

- A key should be attached inside the packing of this Manual.
- Insert the key into the lock and turn it counter-clockwise to unlock the door. To lock it, please turn clockwise. Please save the key well.

OPERATING THE WINE CHILLER

WORKING CLIMATE


- The appliance is designed for operating under T climate. It is recommended to maintain the ambient temperature below 35°C which helps the appliance working with low power consumption.
- If the ambient temperature is above or below the designed climate range, the performance of the unit may be affected.

Note:

- **During periods of high humidity, some condensation may appear on outside surfaces of cooling appliances. This condensation will disappear when humidity levels drop.**
- **For prevention, it is advisable to install the appliance with sufficient ventilation in a dry and/or an air-conditioned room. Please ensure that doors are closing and sealing properly**

WINE STORAGE

- The special display shelves are designed perfectly for bottle base sizes ranging from Bordeaux to Champagne (75cl) for display and storage. The maximum loaded bottles may vary subject to the different size or dimension wine bottles you store.
- The shelves with telescopic rails can be pulled out for easy access to the wine storage, for 3-fold telescopic rails, max 70% can be pulled out.

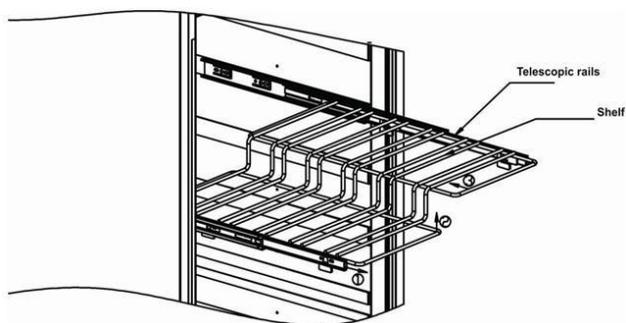

- To prevent damaging the door gasket, make sure to have the door opened fully all the way before pulling the shelves out.
- Please store wine in sealed bottles.
- Do not cover the shelves with aluminum foil or any other shelf material which may prevent air circulation.


- Should the wine chiller be left empty for long periods it is suggested that the appliance is unplugged, and after careful cleaning, leave the door ajar to allow air to circulate inside the cabinet in order to avoid possible condensation, mold or odours forming.

Recommended temperatures for chilling/storing your wines.

Wine Type	Recommender Temp
Red Wines	15 - 18°C (59°F-64°F)
Dry/White Wines	9 - 14°C (48°F-57°F)
Rose Wines	10 - 11°C (50°F-52°F)
Sparkling Wines	5 - 8°C (41°F-46°F)

CONTROL PANEL

- For Single Zone

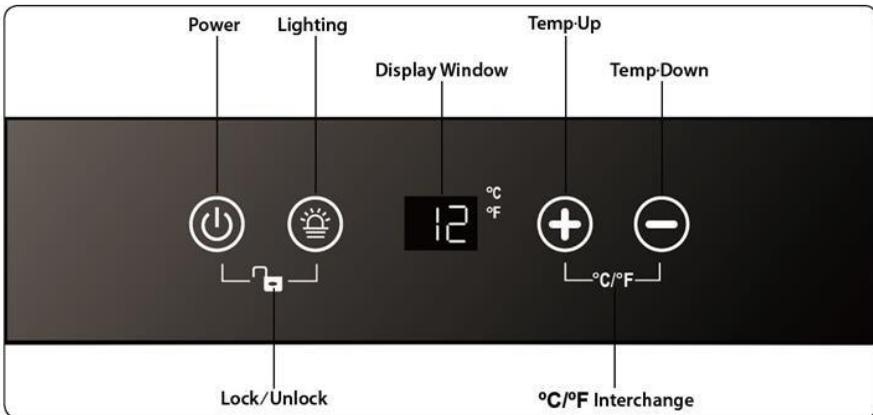

- Power: Turns the wine chiller system on or off.
- Lighting: Turns the interior wine chiller light on or off.
- Power/Lighting: Lock/Unlock button.
- Temp. Up: Increases temperature by 1°.
- Temp. Down: Decreases temperature by 1°

LOCK/ UNLOCK

- Your wine chiller includes a feature that will lock the control panel when if left untouched for 10 seconds.
- To unlock the wine chiller control panel touch the power and lighting buttons simultaneously for 3 seconds.

TEMPERATURE SETTING

- Make sure power cord is connected to a properly grounded outlet.
- Turn power ON
- The temperature for the wine chiller is 5 -22 °C (41-72 °F).
- Directly touch the \oplus or \ominus mark to set the wine chiller temperature as you want.
- The first touch on \oplus or \ominus mark will recall the previous set temperature displayed in the digital window.
- Touch the mark \oplus to increase the set temperature by 1°C (or by 1°F).
- Touch the mark \ominus to decrease the set temperature by 1°C (or by 1°F).
- The digital will change to display the actual temperature of the inside cabinet after 10 seconds without being touched.

Note:

Temperatures may fluctuate depending on whether the interior light is ON or OFF and depending on the position of the bottles.

LAYOUT AND STORAGE

Your wine chiller is designed to store a maximum number of bottles securely. We recommend that you observe the tips below to optimize loading:

- Remove tape from shelves once unit is stable and ready for storage.
- Disperse the bottles evenly to avoid concentrating weight in one place. Bottles must not touch either the back of the cabinet or the step at the bottom.
- While your wine chiller is designed to hold large format bottles such as Pinot Noir and Champagne, these larger bottles reduce the number of bottles you can fit on 1 shelf.
- Make sure that the bottles are not all grouped together either at the top or bottom of the wine chiller.
- Bottles dispersed evenly throughout the wine chiller will contribute to optimal cooling.
- Only pull out one rolling shelf at a time. Never attempt to pull more than one.
- Maximum weight capacity per shelf is 25 kilograms.
- Each rolling shelf is designed to comfortably hold one row of 12 bottles.

Note:

Temperatures may fluctuate depending on whether the interior light is ON or OFF and depending on the position of the bottles.

CARE AND MAINTENANCE


CARE AND MAINTENANCE

CLEANING THE WINE CHILLER

- Turn off the power, unplug the appliance, and remove all items including shelves.
- Wipe the inside surfaces with a sponge and baking soda solution. The solution should be about 2 tablespoons of baking soda to 1 quart (approx. 1 litre) of warm water.
- Wash the shelves with a mild detergent solution. Allow wooden shelves to dry before placing back into the wine chiller.
- Wring excess water out of the sponge or cloth when cleaning area of the controls, or any electrical parts.
- Wipe the outside cabinet with warm water and mild liquid detergent. Wipe dry with a clean soft cloth.
- Do not use steel wool or steel brush on the stainless steel. These will scratch the stainless steel with steel particles and rusting may occur.

REMOVING THE SHELVES

- Before removing a telescopic shelf from the appliance, it is necessary to remove all the bottles on the Shelf;
- Pull out the shelf to align the shelf grooves to the stoppers fixed on the inside cabinet;
- Push upward the shelf from the telescopic rails and remove it carefully.

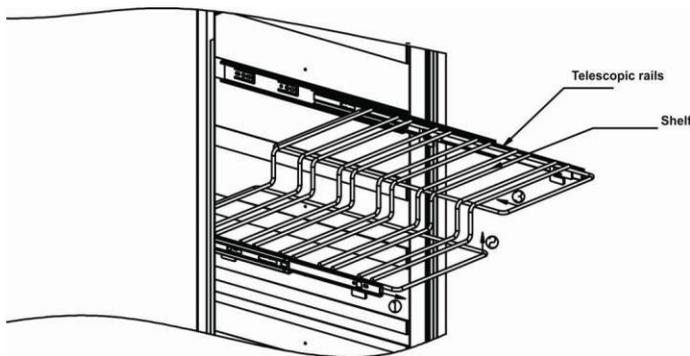

POWER FAILURE

Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of door openings. If the power is going to be off for a longer period of time, you need to take the proper steps to protect your wines.

MOVING THE WINE CHILLER

- Remove all items.
- Securely tape down all loose items (shelves) inside your appliance.
- Turn the adjustable leg up to the base to avoid damage.
- Tape the door shut.
- Be sure the appliance stays secure in the upright position during transportation. Also protect outside of appliance with a blanket, or similar item.

ENERGY SAVING TIPS

- The appliance should be located away from heat producing appliances, and away from direct sunlight.
- Ensure that the unit is adequately ventilated. Never cover air vents.
- Only open the door when necessary. Avoid leaving the door open for long periods or opening/closing the door frequently.

TROUBLESHOOTING

If you feel the appliance is not working properly, follow these instructions to try to see if you can resolve the problem before calling for service.

No.	PROBLEM	POSSIBLE CAUSE / MEASURE
1	The wine chiller does not operate	Not plugged in. The appliance is turned off. The circuit breaker tripped or a blown fuse.
2	The wine chiller is not cold enough	Check the temperature control setting. External environment may require a higher setting. The door is opened too frequently. The door is not closed completely. The door gasket does not seal properly.
3	Automatically turn-on and turn-off frequently	The room temperature is hotter than normal. A large amount of contents has been added to the wine chiller. The door is opened too frequently. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly.
4	The lighting does not work	Not plugged in. The circuit breaker tripped or a blown fuse. The lighting is turned off.
5	Too much vibration	Check to assure that the appliance is level. Check to assure no parts inside the cabinet or in the compressor chamber are loose.
6	The wine chiller seems to make too much noise	The rattling noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant. Contraction and expansion of the inside walls may cause popping and crackling noises. The appliance is not level.
7	The door will not close properly.	The wine chiller is not level. The gasket is dirty. The shelves are out of position.