

## Kadeka The Toaster KADT17S Instruction Manual



Thank you for your purchase. Please read all the instructions in this manual carefully before the use of the product.

### Table of Content

Safety Precautions	—————	P2
General Safety Guideline	———	P3
Product Description	—————	P4
Operating Instruction	—————	P6
Preparing Water Tank	—————	P7
Auto Cooking Mode	—————	P8
Manual Cooking	—————	P9
Storage and Care	—————	P10
Trouble Shooting Guide	———	P11
Limited Warranty	—————	P12

### Specifications

Model Number	KADT17S
Voltage	220-240V~ / 50-60Hz
Power Consumption	1460W – 1740W
Cord Length	Approximately 1.0m
Packing Dimension	46cm (W) x 45cm (D) x 33cm (H)
Product Dimension	40cm (W) x 41cm (D) x 26cm (H)
Weight	6.7kg
Temperature	60°C to 230°C
Accessories	1 x Crumb Tray, 1 x Bake Tray, 1 x Bake Grill

## Important Safety Precautions


**IMPORTANT SAFETY INSTRUCTIONS - READ CAREFULLY AND KEEP FOR FUTURE REFERENCE**

	Do not immerse the appliance, power supply cord or plug in water or any other liquid to protect against electric shock
	If the power supply cord or plug is damaged, the appliance must not be operated until it has been repaired by a competent person
	Do not put foreign objects into the appliance. It may cause electric shock or abnormal operations resulting in injury
	Only allow children to use the toaster without supervision when adequate instructions have been given so that the child is able to use the toaster in a safe way and understands the hazards of improper use
	Do not let the cord touch hot surfaces, be near hot gas or electric burners or be in a heated toaster
	Do not use any accessories other than the accompany ones provided within the packaging
	Do not use for any other purposes apart from cooking
	Do not touch hot surfaces. Always use the knobs and handles
	Do not use outdoors
	Do not insert any oversized food or metal utensils as they may create a fire or risk of electric shock
	Do not store any item on the top of the appliance when in operation
	Do not clean with metal scouring pads as it can break off and get in contact with electrical parts thereby creating a risk of electric shock
	Do not use containers that are made of materials other than metal or glass
	Do not cover any part of the toaster with metal foil as it may cause overheating
Do not store any materials other than the accompany accessories in the appliance when not in use.	

## General Safety Guidelines

1. To read the instruction manual before using the appliance
2. All warnings and cautions on the appliance and in the instruction manual must be followed
3. The appliance should not be used near water for example, near a sink, bathtub, swimming pool, etc.
4. The appliance should be situated such that its location does not interfere with its ventilation.
5. The appliance should be situated away from heat sources such as stoves, radiators or other equipment that produces heat.
6. The appliance should be connected to a power supply only of the type that is described in the instruction manual.
7. Precautions must be taken to ensure that grounding of the appliance is not compromised.
8. Power supply cords should be routed such that they are not likely to be walked on or tangled by items placed upon or against them.
9. The appliance should be cleaned as per instructed in the manual
10. The power supply cord should be unplugged from the outlet when left unused for a long period of time
11. Care should be taken to ensure that foreign objects or liquids are not spilled into the openings of the appliance
12. The appliance should be serviced by a competent person when:
  - a. The power supply cord or plug has been damaged
  - b. Foreign objects or liquid have entered into the equipment
  - c. The appliance has been exposed to rain
  - d. The appliance exhibits a marked change in performance
  - e. The appliance has been dropped or damaged
13. There should be no attempts to service the equipment beyond that described in the manual. All servicing should be performed by a competent person.

## Product Description

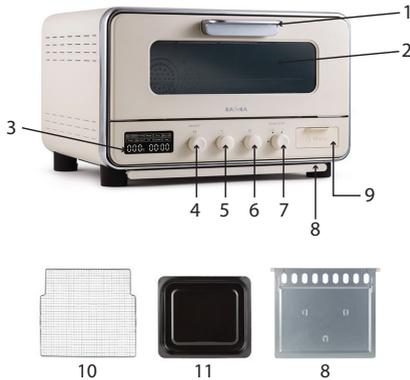

1	Door Handle
2	Glass Door
3	Digital Display
4	Function Control Knob
5	Temperature Control Knob
6	Timer Knob
7	Humidifier Function Knob
8	Crumb Tray
9	Water Tank
10	Bake Grill
11	Bake Tray


Bake Grill



Crumb Tray



- Place the bake tray on the bake grill before use. Do not place the bake tray directly on the heating element.
- To clean the crumb tray if it is dirty before use

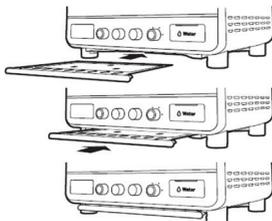

## Product Description

### The Accompany Accessories

 <p>Bake Tray</p>	<ul style="list-style-type: none"><li>• Use it by placing it on the grill</li><li>• You may consider laying an aluminum foil over it during cooking to prevent it from being dirty easily</li></ul>
 <p>Bake Grill</p>	<ul style="list-style-type: none"><li>• To be installed at all times except during servicing or maintenance</li></ul>
 <p>Crumb Tray</p>	<ul style="list-style-type: none"><li>• To ensure that it has been installed before use of the appliance</li></ul>

### The Electronic Control Panel



**Power Button:** Press the button to turn on and off.

**Menu Knob:** You can select the different options by turning the knob

**Temperature Button:** Adjust the temperature between 60°C to 230°C by rotating the knob

**Water Tank**


**Start/Stop Button/Manual Functions:** You can start/stop by pressing the button or rotate it to select the manual functions

**Timer Button:** Adjust the time by rotating the knob


## Operating Instructions

### Preparation before use

1. Place the appliance on a stable and horizontal table with proper clearance distances as shown below

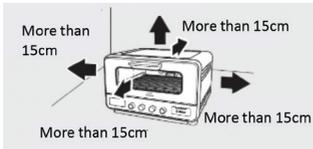

2. Insert the crumb tray
3. Remove the fasteners from the bake grill

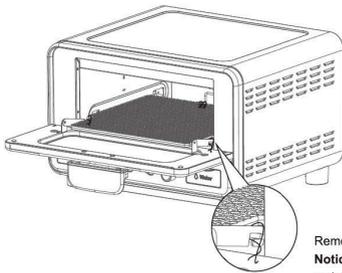


4. Plug the power supply cord into an electrical outlet

When using for the first time, take note of the following

- Remove the accompanying accessories and clean them. Thoroughly dry them before re-assembling back into the toaster
- After re-assembling, we recommend that you turn it to the maximum temperature for 15 minutes to eliminate any packing oil
- Ensure that the knobs are in the original position before putting any food in
- The heating element will turn red as the temperature goes up. In order to prevent over-cooking, you may like to stay beside the toaster

## Preparing the Water Tank

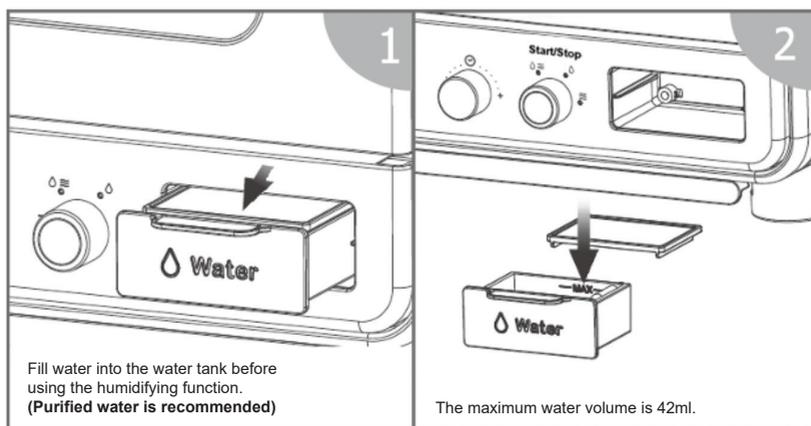

1. Pull out the water tank, remove the lid and fill it up with water to the maximum line before cooking
2. After cooking, pull out the water tank, remove the lid and discard the water and wash the water tank for hygiene purposes. Allow it to dry sufficiently before inserting it back.



- During use of the humidifier function, if there is a lack of water, an indicator will flash and alarm will sound. If there is insufficient water, the humidifier function will stop. In order to rectify it, pull out the water tank and refill it. Kindly press the “Start/Stop” knob to restart the appliance.
- Do not put more water than the MAX line
- Do not put too little water as it might not be sufficient for the operation of the humidifier function. It is recommended to fill it up to the MAX line every time before use.
- Do not put anything other than water into the water tank as it may cause a malfunction
- Do not move the appliance after adding the water as it may cause a malfunction.

## Auto Cooking Mode

### Auto Cooking Menu

Menu	Humidifier	Temperature	Time
Toast (2 Slices)	Yes	230°C	4:00 mins
Toast (4 Slices)	Yes	230°C	5:00 mins
Reheat		200°C	8:00 mins
Pizza	Yes	230°C	8:00 mins
Frozen Snacks		230°C	10:00 mins
Onigiri		230°C	7:30 mins
Baked Rice		200°C	20:00 mins
Grill		230°C	10:00 mins
Cookies		180°C	10:00 mins
Cake		160°C	20:00 mins

### How to operate the Auto Cooking Mode

1. Press the power button to turn on the power of the appliance
2. Turn the knob to select a menu. The temperature and time are configured automatically based on the selection of the menu
3. Press the Start/Stop button to activate the cooking
4. Once the cooking has completed, an “End” will be displayed on the electronic control panel
5. After cooking, take out the cooked food. Be mindful that it will be hot so do consider the use of toaster gloves to prevent any occurrence of burns.

\*Allow the toaster to cool down with door opened for at least 10:00 mins between each toasting session

## Manual Cooking

### Manual Cooking Settings

Setting	Convection	Humidifier	Usage
-	X	X	Convection off/Humidifier off Direct heating by using the upper and lower heating elements
	O	O	Convection on/Humidifier on Moisture will be added to make the dish juicy
	X	O	Convection off/Humidifier on Allows you to make soft adjustments to your cooking using humidifier
	O	X	Convection on/Humidifier off Using convection allows even baking which is suitable for confectionary, crispy items, etc

1. Press the power button to turn on the power and set the temperature. Set the temperature by turning the knob. The temperature can be set from 60°C to 230°C
2. Set the cooking time by turning the time setting knob. The time can be set between 1 minute to a maximum of 1 hour
3. Turn the convection/humidifier knob to select your preferred manual cooking mode
4. Once the cooking has completed, an “End” will be displayed on the electronic control panel
5. After cooking, take out the cooked food. Be mindful that it will be hot so do consider the use of toaster gloves to prevent any occurrence of burns.

## Storage and Care

### Cleaning

**IMPORTANT:** Before cleaning any part, be sure that the appliance is off, unplugged and cool. Always dry parts thoroughly before using toaster after cleaning.

1. Clean the outside of the appliance with a damp cloth and dry thoroughly. A non-abrasive liquid may be used for stubborn stains. Rinse and dry thoroughly. Do not use metal scouring pads or abrasive cleaners that will scratch the surface.
2. Clean the Glass Door with a cloth or sponge dampened with warm water. Dry thoroughly.
3. Remove the Bake Grill, Bake Tray & Crumb Tray. Wash in soapy water and dry thoroughly.
4. Do not use abrasive cleaners or metal scouring pads to clean the Back Rack, Bake Tray & Crumb Tray. For stubborn stains, clean with a nylon or polyester mesh pad and a mild, non-abrasive cleaner. Rinse and dry thoroughly.

**CAUTION:** Do not use spray-on or other toaster cleaners as they may cause electrical damage.

### Storage

1. Unplug appliance and allow it to cool before storing.
2. Do not store it while it is hot or still plugged in.
3. Do not wrap the power supply cord tightly around the appliance.
4. Do not put any stress on the power supply cord as it may cause damage.

## Trouble-shooting Guide

The following situations are normal and are not signs that the appliance is malfunctioning.

Issue	Possible Cause(s)	Remedy
1. Display	Nothing appears on the display	(A) Turn the dial (B) Check power plug is connected (C) Check fuse or circuit breaker is functioning properly.
2. Noise / Sound	Noise when using the humidifying function	Water is being pumped to the steam generator. This is normal.
3. Smoke / Odour	When using the toaster for the first time, there may be smell.	This will eventually disappear.
4. Clicking noise caused by the heater turning on and off during cooking.	It is the sound of the heater regulating the internal temperature.	This is not a malfunction and is normal.
5. Steam comes out of the door	Steam from the boiler or moisture in the food may come out of the door during cooking.	This is normal.

## Limited Warranty

Kadeka will charge a repair fee or fee for replacing an accessory or repairing a cosmetic defect if the damage to the unit or accessory was caused by the customer. Items this stipulation covers include:

- Door, handles, or control panel that are dented, scratched or broken
- Broken or missing accessories that accompany the appliance.

Use this toaster only for its intended purposes described in this instruction manual. Warnings and important safety instructions in this manual do not cover all possible conditions and situations may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your toaster.

Use this appliance only for cooking food. It is intended for domestic use only. Do not heat any textile or cushions filled with grains. The manufacturer cannot be held liable for damage caused by improper or incorrect use of the appliance. To avoid deterioration of the appliance surface and hazardous situation, always keep the appliance clean and well-maintained.